

SCANDINAVIAN PROFILES


Tips For Ordering Profiles

By providing the necessary details and measurements we are able to provide faster quotes

What we require is a basic section view sketch showing :

- Measurements of each face
- Edge types (RE) = Recess Edge (CE) = Cut Edge (PW) = Paper Wrapped Edge
- Board Type (Standard, Span, Aqua, Sound, Fire, Impact)
- Board thickness (10mm - 13mm - 16mm)
- Length (up to 6000mm long)
- Face paper (Internal or External)

Here are a few examples!

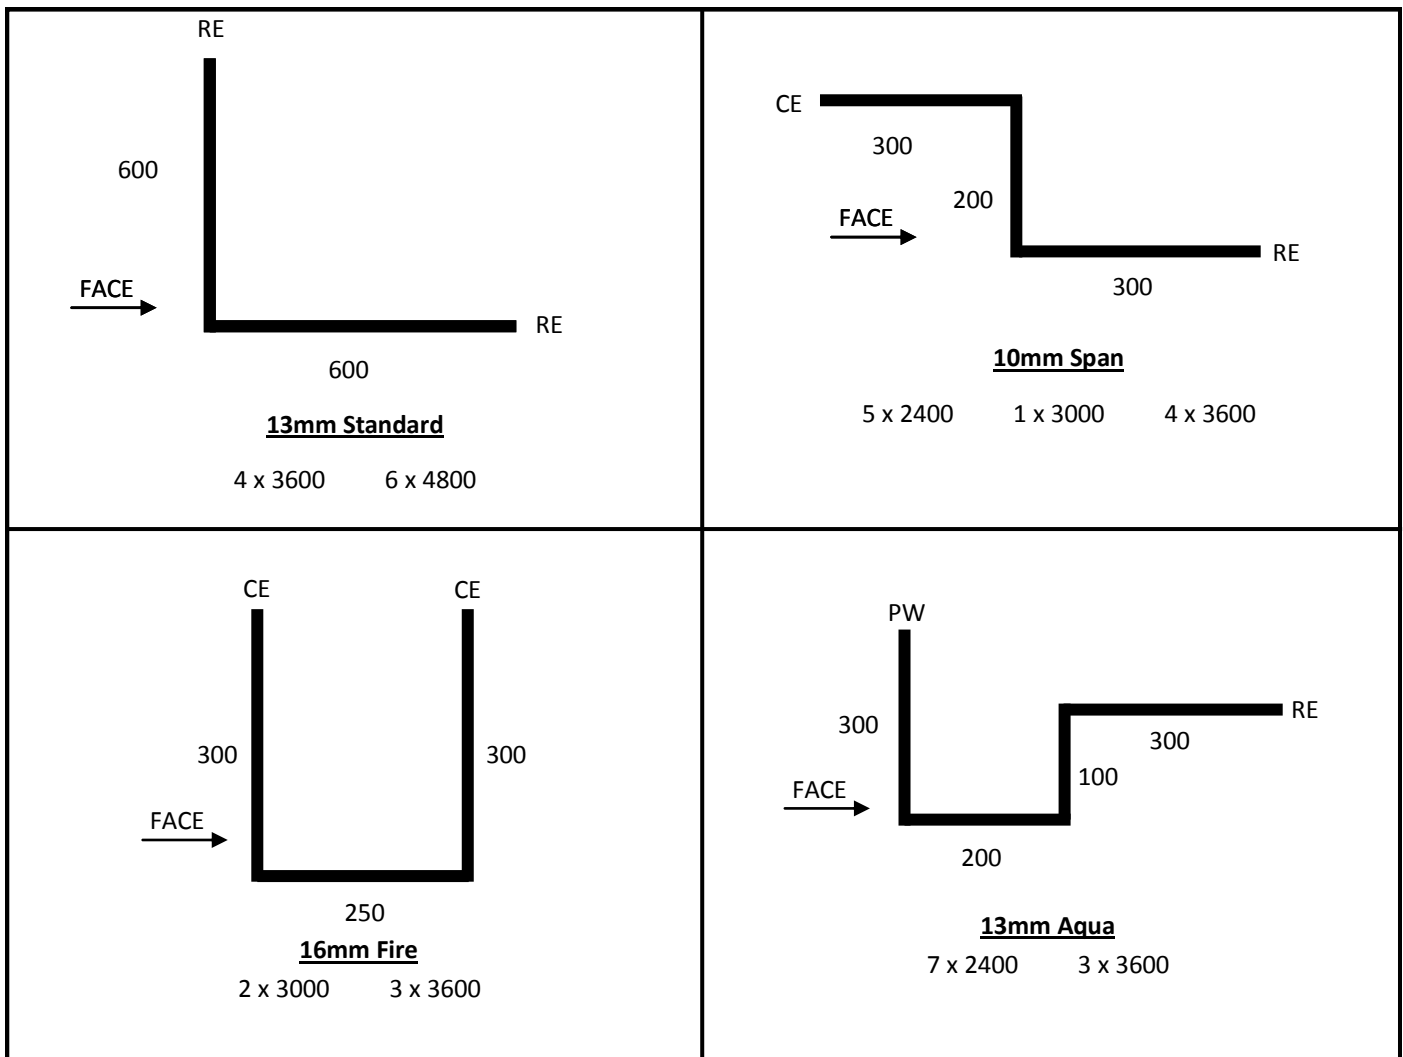

Email: info@scanprofiles.com.au

Web: Scanprofiles.com.au

PH:(02) 9605 - 3333

FAX:(02) 9605 - 3791